
 
 


# INSTALLATION MANUAL



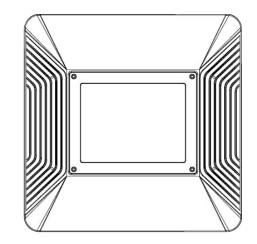





sales@nedlandsgroup.com.au




CL/5W-SM CL150W-SM

### Pre-Installation Considerations

• Check whether it is an AC (Alternating Current) or DC (Direct Current) based system.

# Installation Dimensions (Unit: mm)

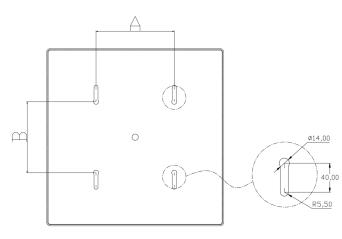


# Recommended Hole Size


Model		Size B
CL75W-SM	188.5mm(7.42inches)	200mm(7.87inches)
CL110W-SM	188.5mm(7.42inches)	200mm(7.87inches)
CL150W-SM	188.5mm(7.42inches)	200mm(7.87inches)

### Installation Instructions

STEP 1

STEP 2

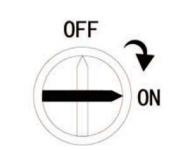

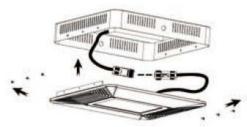


Size A

Loosen the 6 screws on the left and right of the fitting. Remove the lamp from the cover and disconnect the driver from the lamp.

## Installation Instructions (continued)

STEP 3

STEP 4

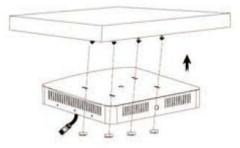


Place the cover on the ceiling and mark out the 4 screw holes. Then remove the cover and drill the 4 holes. Place the cover on the ceiling, lining up the 4 holes and screw the cover to the ceiling. Then connect the driver to the lamp.

STEP 5



 Installation complete.





Connect the wires

- AC L (Brown)
- AC N (Blue)
- AC (Green/Yellow)

STEP 7

