 


Photometric Data

Oval lens for pathway application




Beam angle: C0: 165° C90: 68°

Mounting height	Spacing distance
2,5m	18m
3,0m	20m
3,5m	22m

Compliant EUROPE standard EN1838
illuminance requirement:
Escape route up to 2m wide, 1lx on
central axis and 0,5lx at 50% of the width.

 Round lens for open area application




Beam angle: 148°

Mounting height	Spacing distance
2,5m	9m
3,0m	10m
3,5m	11m

Compliant EUROPE standard EN1838
illuminance requirement:
Escape route up to 2m wide, 1lx on
central axis and 0,5lx at 50% of the width.

Wiring diagram

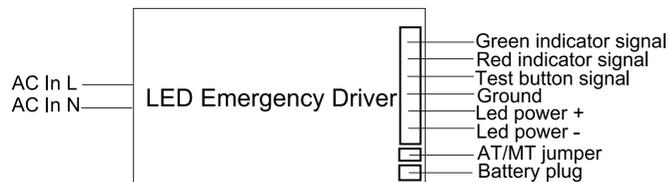

Instructions for automatic test option

1. Instruction for Automatic test function

Once the unit is powered up, a self-diagnostics test will be automatically initiated:

- Check battery, lamp, charge board and transfer fault all the time.
- Run 2H duration test every six month.
- Run 2H duration test every year.

Note: All test functions are preset and no need field adjustment.

3. Button Test

Press test button once with 0,2s to 1s	Run a 5s duration test
Fast Yellow Flash: 0,5s ON and 0,5s OFF	Errors
Press test button more than 2s	Clean Errors

Note: When the fault is recovered, press the test button for 2s, the yellow flashing indicator will turn green. The fault is cleaned, and the unit is back to normal.


2. Dual Colour LED Status Indicator Meaning

- Green indicator on: Ready/ Normal Operation
- Yellow indicator flashes: Require service

Fast Yellow Flash: 0,5s ON and 0,5s OFF	Errors
Slow Yellow Flash: 1s ON and 1s OFF	Under Test
Slow Yellow Flash: 4s ON and 1s OFF (The indication remains for 5 days and reverts to normal Green)	Work Normally

 **POWER-LITE**
Certainty at The Speed of Light

INSTALLATION MANUAL

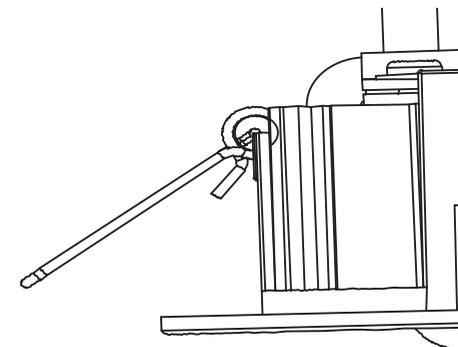

LED

DOWNLIGHT

LED3W-ENM

 **POWER-LITE**®

 1800 909 306

 nedlandsgroup.com.au

 sales@nedlandsgroup.com.au

Precautions

Normal Operation: The green LED indicator stays on when connected to mains supply. The indicator will turn off when the mains supply fails, or when the internal charger malfunctions, or when the luminaire is in test mode.

Battery: LiFePO4 rechargeable battery pack. Battery should be replaced when it reaches the end of its lifetime. To avoid damage to the luminaire and ensure its performance, the battery should be replaced with same type.

Test Switch: Press the test button, LED indicator will turn off and the luminaire will be powered by the battery pack. The light source is non-replaceable. When the light source reaches the end of its lifetime, the whole luminaire shall be replaced.

Installation Procedure

WARNING

1. Switch off before installation or maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.
4. This luminaire is not intended for use in high-risk task area lighting.



Turn Off
Power Supply

Read instructions and check you have all the tools and accessories to complete the installation correctly.


Installation

FIG.1



Cutout:
D55 cover: 42-50mm
D140 cover: 85-105mm

FIG.2

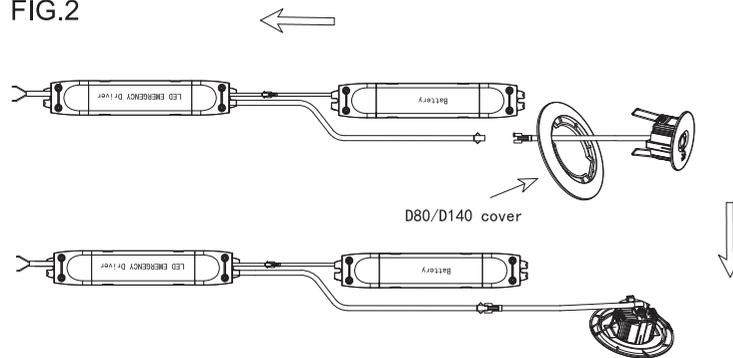

NOTE: Go directly to the next step if no need D80 cover.

FIG.3

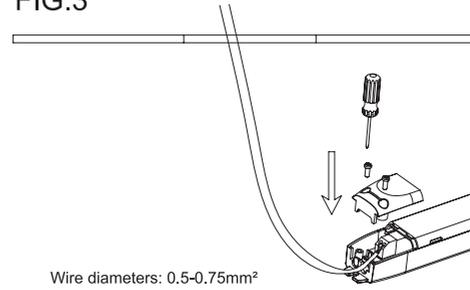


FIG.4

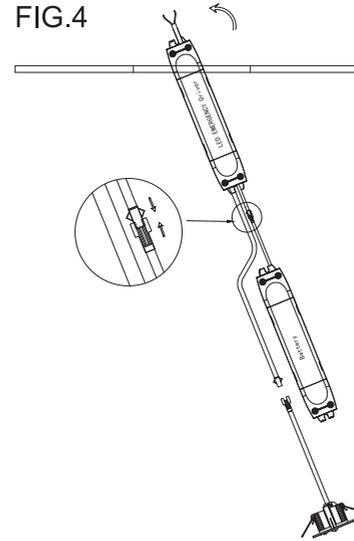


FIG.5


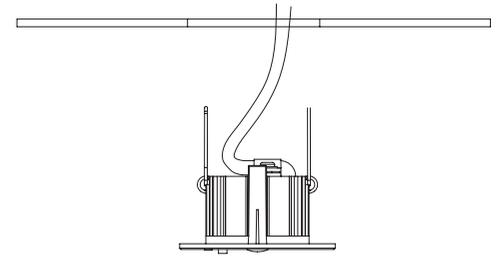


FIG.6

 

Change Lens (Optional)

