


Sensor Information

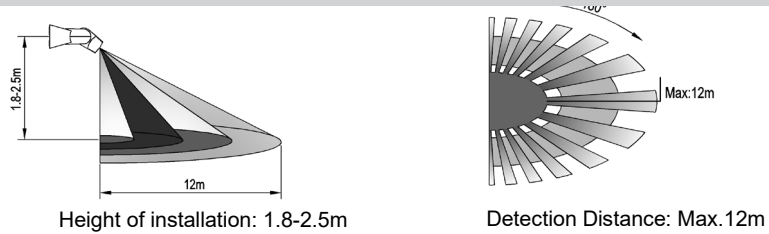

Testing the Sensor


- Adjust the hold time using the time control on the side of the sensor to 10 seconds.
- Switch on the power; the sensor and its connected lamp will have no signal to start with. After Warm-up 30sec, the sensor will work. If the sensor receives the induction signal, the lamp will turn on. When there is no induction signal, the load should stop working within 10sec \pm 3sec and the lamp would turn off.
- Turn LUX control clockwise to the minimum (3). If the ambient light is more than 3LUX, the sensor will not be activated. If the ambient light is less than 3LUX (night time), the sensor will be activated.

Note if testing during daylight, turn the lux control clockwise to the sun setting.

Troubleshooting

- The load does not work:
 - a. Please check if the connection of power source and load is correct.
 - b. Please check if the load is ok.
 - c. Please check if the settings of on the sensor correspond to ambient light.
- The sensitivity is poor:
 - a. Please check if there is any obstruction in front of the detector that would cause the sensor not to receive a signal.
 - b. Please check if the ambient temperature is too high.
 - c. Please check if the induction signal source is in the detection field.
 - d. Please check if the installation height corresponds to the height recommended in the instruction leaflet.
- The sensor won't switch off the load automatically:
 - a. Please check if there is continual signal in the detection field.
 - b. Please check if the time delay is set to the maximum position.

INSTALLATION MANUAL

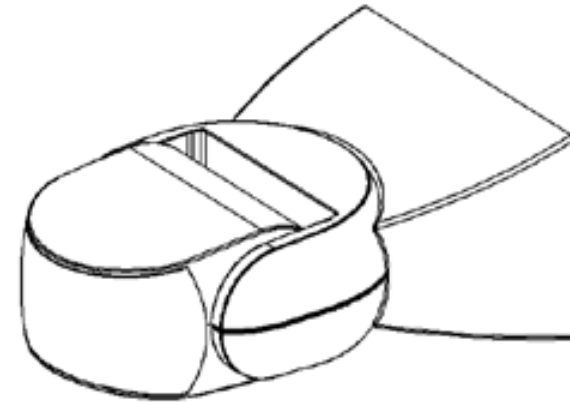

INFRARED MOTION

SENSOR

MS-12M-180

Introduction

MS-12M-180 Infrared motion sensor

The sensor has great detection sensitivity via integrated circuitry. It utilizes the infrared energy from humans as the control-signal source.

Specifications

Power Source: 220-240V/AC

Power Frequency: 50/60Hz

Ambient Light: <3-2000LUX (adjustable)

Time Delay: Min. 10sec±3sec

Max. 15min±2min

Rated Load: Max. 1200W

300W



Detection Range: 180°

Detection Distance: 12m max (<24°C)

Working Temperature: -20~+40°C

Working Humidity: <93%RH

Power Consumption: approx 0.5W


Installation Height: 1.8-2.5m

Detection Moving Speed: 0.6-1.5m/s

Installation Recommendation

As the detector responds to changes in temperature, avoid the following situations:

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units and light etc.
- Avoid pointing the detector towards objects that may move in the wind, such as curtains and tall plants etc.

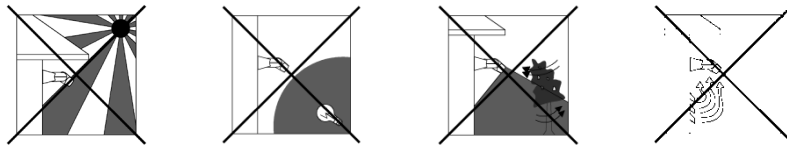

Installation



WARNING

Warning. Danger of death through electric shock!

- Must be installed by professional electrician,
- Disconnect power source.
- Cover or shield any adjacent live components.
- Ensure device cannot be switched on.
- Check power supply is disconnected.

- Loosen the screw at the bottom of the sensor and remove the cover (refer to the figure1).
- Pass the power wire through the hole with gasket in the bottom. Connect the power wire into the terminal as per the wiring diagram.
- Fix the wall plate to the installation surface. (refer to the figure2).
- Install back the sensor on the wall place, tighten the screw and test it.

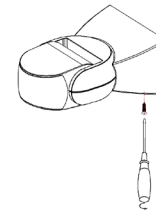


Figure1

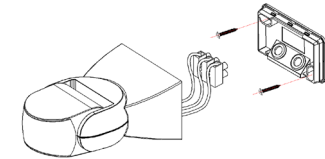


Figure2

Connection Wire Diagram

