

3. Button Test

Press test button once	run a 30s duration test
Press test button twice within 2s	run a 3mins duration test
Press test button 3 times within 2s	run a 30mins duration test
Press test button 4 times within 2s	run a 2H duration test


Status indication for Self-Testing

System status is indicated by a bi-colour LED and by a DALI status flag.

LED indication	Status	Commentary
Permanent green	System OK	
Fast flashing green (0.1 sec. on - 0.1 sec. off)	Function test underway	
Slow flashing green (1 sec. on - 1 sec. off)	Duration test	
Red LED on	Load failure	Open circuit / Short circuit / LED failure
Slow flashing red (1 sec. on - 1 sec. off)	Battery failure	Battery failed the duration test or function test/ Battery is defect / Incorrect battery voltage
Fast flashing red (0.1 sec. on - 0.1 sec. off)	Charging failure	Incorrect charging current
Double pulsing green	Inhibit mode	Switching into inhibit mode via controller
Binary transmission of address via green/red LED	Address identification	During address identification mode
Green and red off	Emergency mode	Battery operation (Emergency mode)



INSTALLATION MANUAL

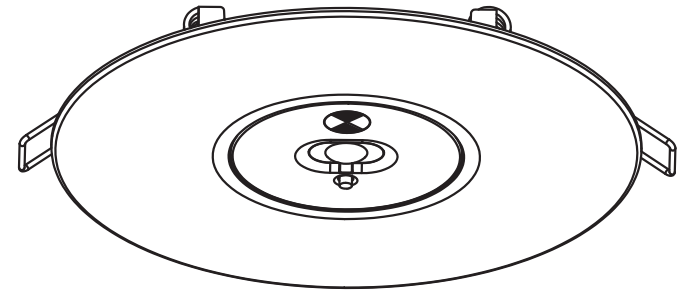

1800 909 306

nedlandsgroup.com.au

sales@nedlandsgroup.com.au

LED EMERGENCY

LIGHT

LED3W-ENM-B

⚡ Precautions

Normal Operation: The green LED indicator stays on when connected to mains supply. The indicator will turn off when the mains supply fails, or when the internal charger malfunctions, or when the luminaire is in test mode.


Battery: LiFePO4 rechargeable battery pack. Battery should be replaced when it reaches the end of its lifetime. To avoid damage to the luminaire and ensure its performance, the battery should be replaced with same type.

Test Switch: Press the test button, LED indicator will turn off and the luminaire will be powered by the battery pack. The light source is non-replaceable. When the light source reaches the end of its lifetime, the whole luminaire shall be replaced.

⚡ Installation Procedure

⚡ WARNING


1. Switch off before installation or maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.
4. This luminaire is not intended for use in high-risk task area lighting.



Read instructions and check you have all the tools and accessories to complete the installation correctly.


⚡ Recessed Mount

1. Cutout:




D55 Cover: 42-50mm
D80 Cover: 66-70mm
D140 Cover: 85-105mm

2. Go directly to the next step if no need D80/D140 cover.

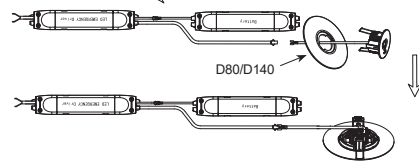


3. Wire diameters: 0.5-0.75mm²

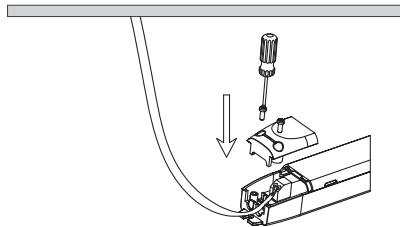


Standard wiring


DALI wiring

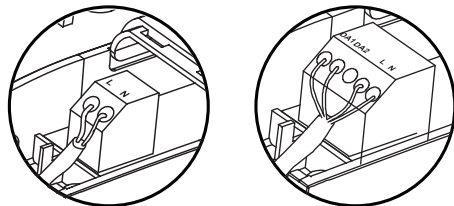


4.

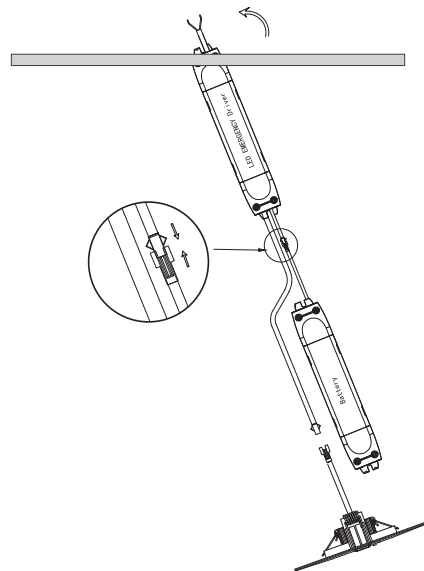


5.

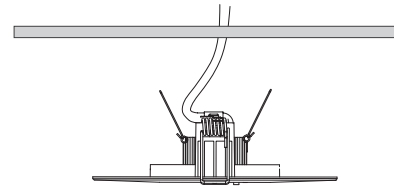

6.




⚡ Change Lens

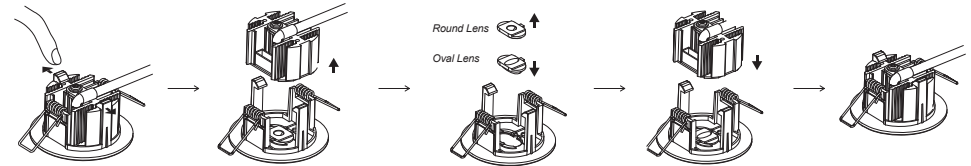

⚡ Photometric Data


Round lens for open area application

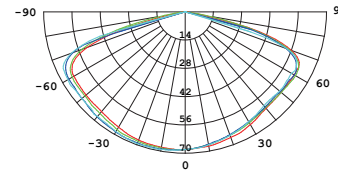

AVERAGE BEAM ANGLE(50%): 145.9 DEG

Mounting height	Spacing distance
2.1m	11.5m
3.3m	18.1m
5.0m	25.2m
AS/NZS 2293.1:2018 (MINIMUM LIGHT LEVEL OF 0.2LUX)	
Round lens	C0: D63 C90: D63

Oval lens for pathway application

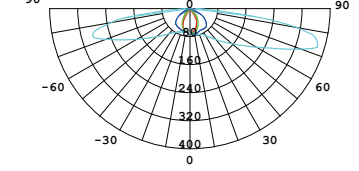

AVERAGE BEAM ANGLE(50%): 103.9 DEG

Mounting height	Spacing distance
2.1m	9.0 m
3.3m	14.1m
5.0m	18.6m
AS/NZS 2293.1:2018 (MINIMUM LIGHT LEVEL OF 0.2LUX)	
Oval lens	C0: A50 C90: E63

⚡ Instructions for automatic test option

1. Instruction for Automatic test function

- Once the unit is powered up, a self-diagnostics test will be automatically initiated:
- Check battery, lamp, charge board and transfer fault all the time.
- Run 2H duration test every half a year.

Note: All test functions are preset and no need field adjustment.

2. Dual Colour LED Status Indicator Meaning

- Green indicator solid on: Ready/ Normal Operation
- Red indicator flashes: Require service

•	One flash, 4s pause	Battery disconnected
••	Two flashes, 4s pause	Low battery voltage
•••	Three flashes, 4s pause	Charge board fault
••••	Four flashes, 4s pause	AC/DC transfer fault
•••••	Five flashes, 4s pause	LED lamp fault

Note: When the fault is recovered, press the test button for 2s, the red flashing indicator will turn green. The fault is cleared, and the unit is back to normal.